


1105/1105BP

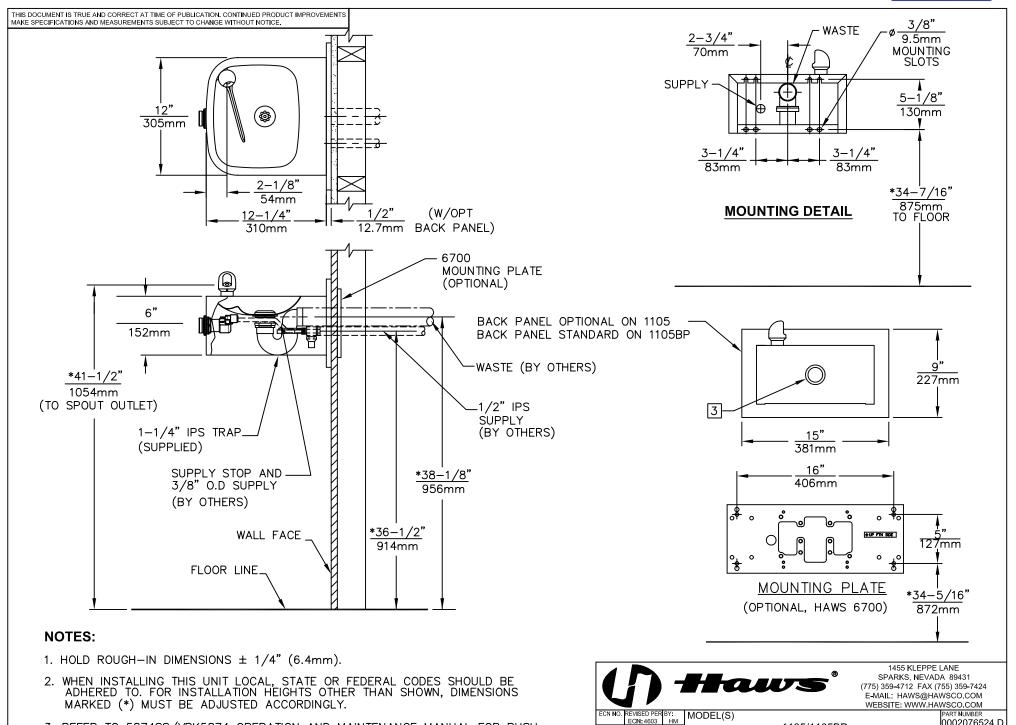

3. REFER TO 5874SS/VRK5874 OPERATION AND MAINTENANCE MANUAL FOR PUSH

BUTTON AND VALVE INSTALLATION/MAINTENANCE INSTRUCTIONS.